
INTERIM

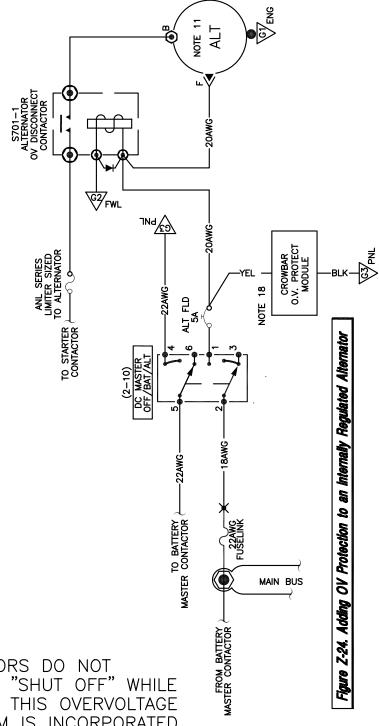

NOTE:

SOME ALTERNATORS DO NOT

TOLERATE BEING "SHUT OFF" WHILE

UNDER LOAD. IF THIS OVERVOLTAGE

CONTROL SYSTEM IS INCORPORATED,

IT'S IMPORANT NOT TO SHUT THE ALTERNATOR
"OFF" ANY TIME THE ENGINE IS RUNNING

EXCEPT EMERGENCIES.

THE PROPOSED SYSTEM DESCRIBED ON THE NEXT PAGE WILL EASILY REPLACE THE INTERIM SYSTEM AND HAS NO PROHIBITIONS AS TO WHEN AND HOW THE ALTERNATOR IS SWITCHED ON OR OFF.

INTERIM

TITLE			PAGE
TEMPORARY	ALTERNATOR	CONTROL	1.0